



**Tools Required:** Stanley Knife or similar, Flat Head Screwdriver, 1/2" Spanner

**1** Carefully unpack the ottoman base/s, glide feet, headboard, 4 headboard bolts, 4 headboard screws, 4 plastic spacers and 2 base clamps (clamps not included with single ottomans). If using a knife, be careful not to cut the fabric.


**2** Locate the glide feet into the metal recesses on the underside of the base/s. Should they not easily locate fully **do not** apply force as they may crack. Instead, with all feet located, carefully place the base on the floor with the glide feet touching the floor and sit on each corner to push the feet into place until you hear/feel a click.

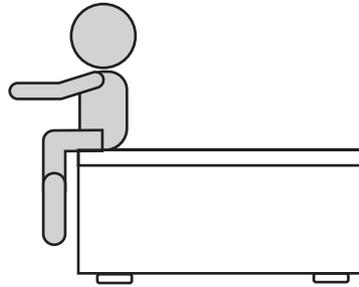

**3** For small double, double, king and super king sizes, line up the bases and clamp together in the middle on the inside top edge with the supplied metal clamps, one on each side. Skip this step for single ottomans.

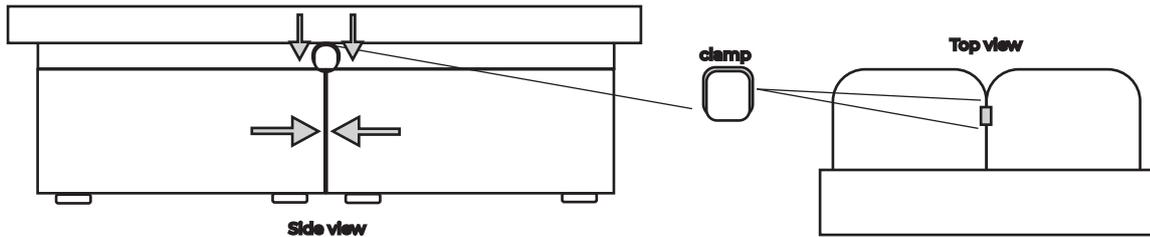


**4** Secure the gas lifts to the lids. Open the lids and locate the bolts on the inner edges of each lid, there are 4 in total (2 on a single). Unscrew these and set aside. Raise each of the gas lifts so that the mounting hole lines up with the hole in the side of the inner edge of each lid. Secure in place using the bolts you set aside. Use a 1/2" spanner to tighten all 4 (2 on a single).

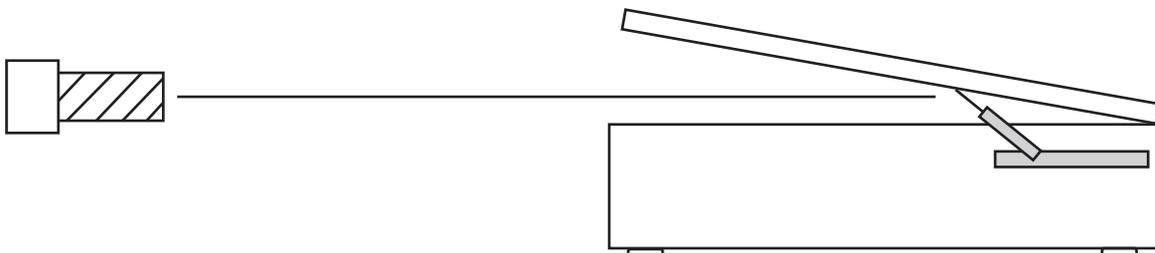

4


Cont...

Now pierce holes in the fabric where the holes are located on each lid where they meet when open. Use the short bolt supplied to secure the 2 lids together so that when opened they open together. Skip for single ottomans.

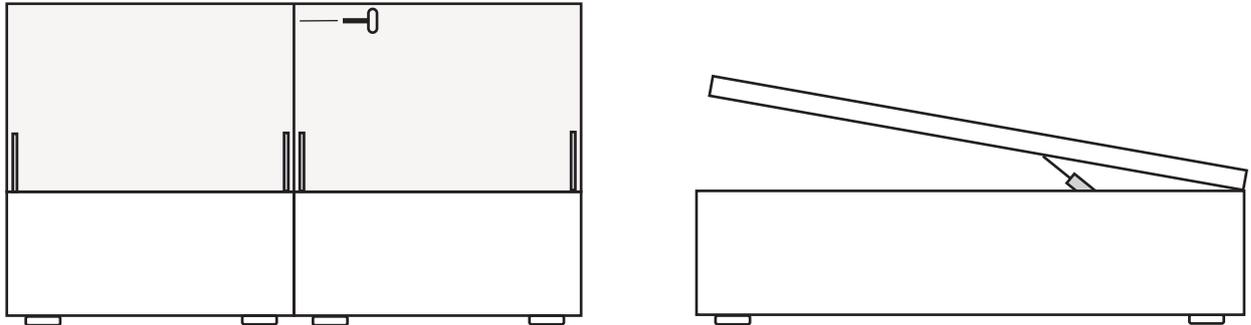

5

Moving on to the headboard, locate the 4 screw holes under the black fabric on the rear left & right of the headboard, these are usually highlighted by stickers. Carefully pierce the fabric above each screw hole. Now line up the holes on the wooden struts with the holes in the headboard and secure together with the included screws using a flat head screwdriver. **\*Note: This doesn't apply to floorstanding headboards, where no assembly is required.**

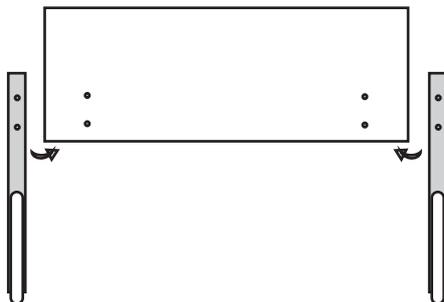


\*Note: The 4 headboard screws will be included in a small clear bag alongside the headboard & wooden struts.

6

For end opening ottoman bases, locate the 4 bolt holes under the fabric on the end of the base closest to where the lid hinges and pierce the fabric. Again, these should be highlighted by stickers.


For side opening ottomans, set the base in the position you need for the lid to open the way you need it to, eg opening to the left or the right side of the bed. This will dictate which end of the bed to attach the headboard. Once located, pierce the fabric.

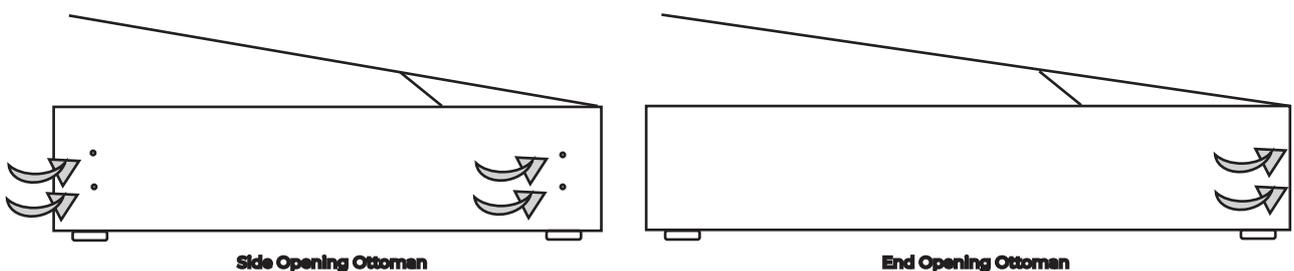


**6**

Cont...

**For headboards with wooden struts:** Now screw-in each of the 4 included headboard bolts with the included spacers leaving enough of a gap to fit the struts of the headboard between the heads of the bolts and the spacers. Carefully lift the headboard into place, making sure both headboard struts are located over the headboard bolts and slide down to the height required, tightening the headboard bolts to hold the headboard at this desired height.

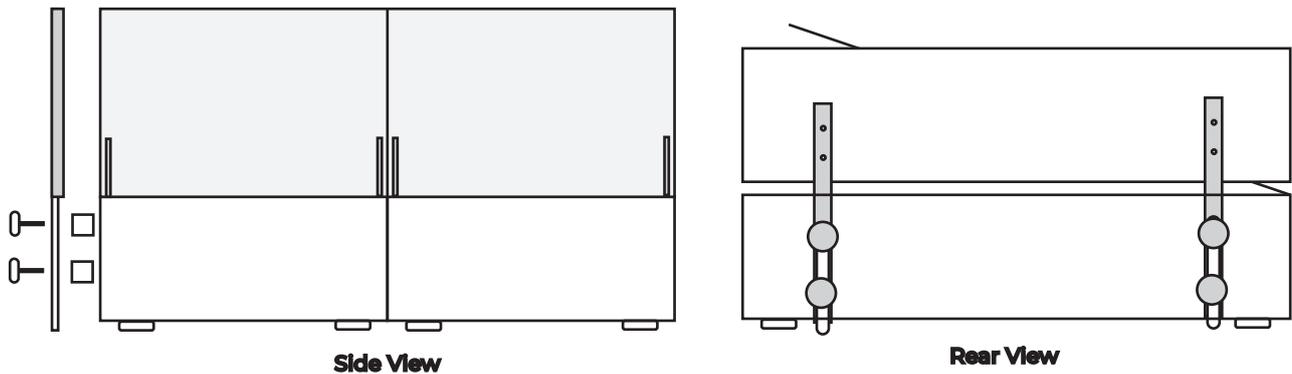

**For floorstanding headboards:** Position the headboard in place against the end of the base, aligning the holes on the base with the cutouts in the headboard, and secure in place using the 4 supplied headboard bolts. Make sure to place the spacers between the base and headboard and pass the bolt through.

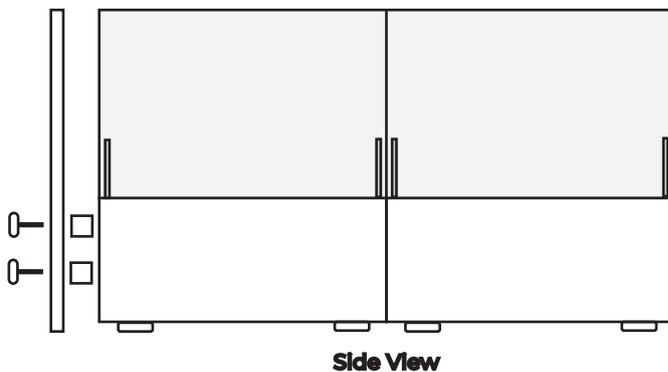**7**

Slide the completed bed into the spot where you want it in the room, ready for your mattress. The weight of the mattress will help keep the ottoman closed. That's it, you've done it.